



# HTC One M8 Rear Case Replacement

This guide will demonstrate how to separate the front and back casings of the HTC One M8.

Written By: Michael Gonzalez



## INTRODUCTION

Use this guide to replace the rear case on your HTC One M8.



### TOOLS:

- [iOpener](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [T5 Torx Screwdriver](#) (1)
- [SIM Card Eject Tool](#) (1)
- [iFixit Opening Picks set of 6](#) (1)



### PARTS:

- [HTC One \(M8 Verizon\) Rear Case](#) (1)

## Step 1 — SIM Card



- Insert a SIM card ejector tool or a paperclip into the small hole in the SIM card tray, located on the upper left hand side of the phone.
- Press to eject the tray.
- ⓘ This may require a significant amount of force.

## Step 2




- Remove the SIM card tray assembly from the HTC One M8.
- ★ When reinserting the SIM card, ensure that it is in the proper orientation relative to the tray.

### Step 3 — MicroSD Card



- Insert a SIM card eject tool or a paperclip into the small hole in the microSD card tray, located on the upper right hand side of the phone.
- Press to eject the tray.
- ⓘ This may require a significant amount of force.

### Step 4

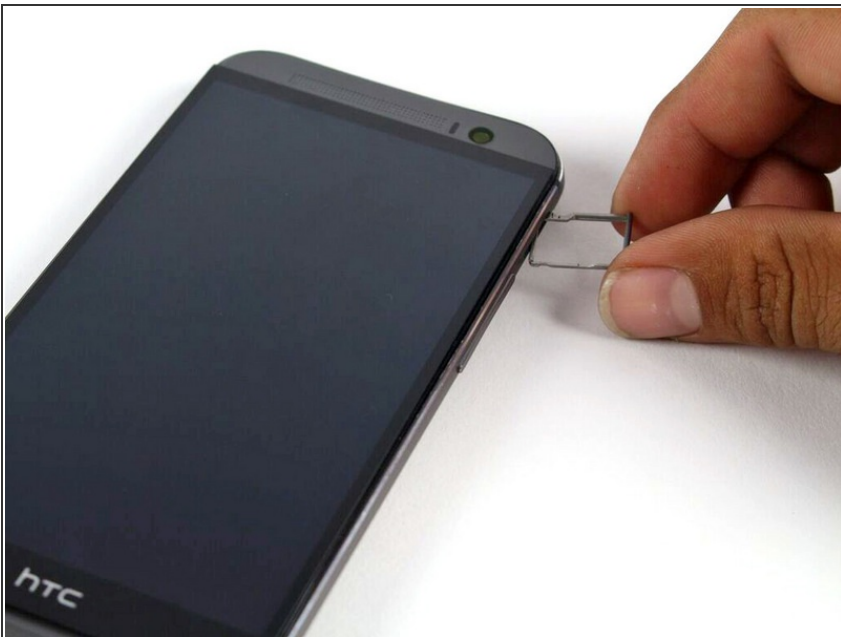

- Remove the microSD card tray assembly from the HTC One M8.
- ★ When reinserting the microSD card, ensure that it is in the proper orientation relative to the tray.

## Step 5 — Rear Case



- Use an iOpener or heat gun to loosen the adhesive on the upper and lower speaker grilles.
- ⓘ Refer to the [iOpener guide](#) for info on how to use the iOpener.

## Step 6



- Use a plastic opening tool to gently peel up the lower speaker grille.
- ⓘ The adhesive is messy, and can be removed using Goo-gone.




## Step 7



- Use a plastic opening tool to gently peel up the upper speaker grille.

## Step 8

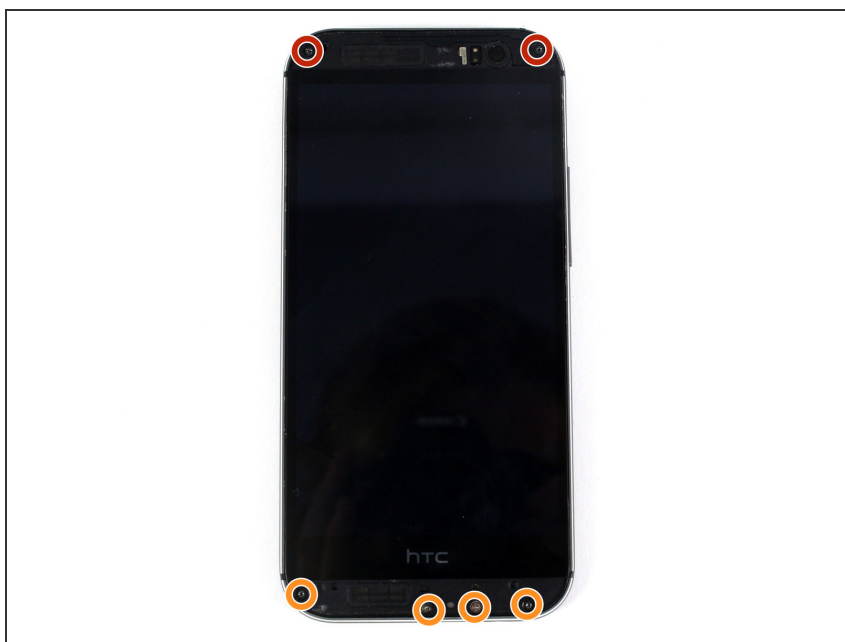

- Remove the two silver 3 mm Phillips #00 screws from the top.
- Remove the four black 4 mm T5 Torx screws from the bottom.

## Step 9



- Work your way around the perimeter of the phone with a spudger and plastic opening picks to free the clips that secure the rear case to the display assembly.
    - ⓘ A metal spudger is pictured, but it is best to use a nylon spudger to prevent marring the device.
    - ⓘ Be careful not to lose the power button: it sits loosely in the top of the lower chassis.
- ⚠ Significant force may be required to pry the casing apart.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-22 03:22:32 PM.